

---

**IN-CAR  
TELEPHONE  
HANDBOOK  
SUPPLEMENT  
JJM 10 31 99/801**

---

This supplement replaces pages 6 and 13 of the  
In-Car Telephone Handbook, JJM 10 31 99/80.

## HANDS-FREE SYSTEM/OPERATION


### SIM Card Insertion and Removal

To insert the SIM (Subscriber Identity Module) card:

1. Make sure the phone is OFF.
2. Insert the SIM card into the slot in the base of the phone as shown.
3. Push the card into the phone until the outer end is flush with the base of the phone.

To remove the SIM card:

1. Make sure the phone is OFF.
2. Slide the release button towards the base of the phone.
3. Pull the SIM card from the phone.

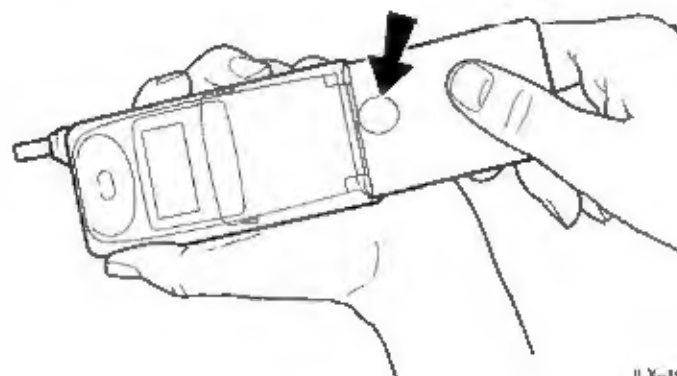


JLX-192

### Operating with a PIN Code

For details of PIN code entering, refer to the 'Telephone User Guide'.

To enter the PIN code from the radio keypad, select phone mode. The radio display shows PIN. As each digit is typed in, a '\*' symbol is displayed. To enter the PIN code, press the Send/End button. If the wrong PIN code is entered, the display will show **WRONG PIN** for three seconds.

**Note:** If the PIN code option is on, the code will be lost whenever the ignition is turned off and the safety timer period ends. The PIN code must be entered again before the phone will operate.

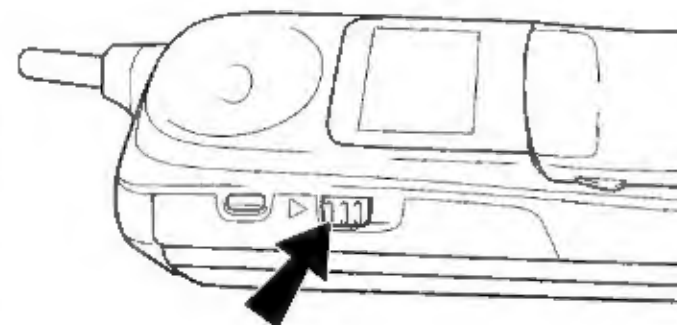

JLX-195

### Continuity of Calls

If the phone is in a call when it is connected to the in-car installation, the call will continue. If a call is in progress when the vehicle's ignition switch is turned to position 'O' (OFF), the call remains connected. When the call ends, another call cannot be made or received unless the ignition switch is turned to position 'I' (auxiliary) or 'II' (ignition).

**To switch between handset and hands-free:** Press the mute button on the side of the phone as shown. The phone will automatically switch to hands-free when it is placed into the cradle.

### Handset Mode

The handset mode is when the phone is connected to the coil cord but not installed in the cradle. Calls can be made or received in the handset mode using the keypad and control buttons on the phone. The radio can still be listened to during handset use by pressing AM/FM, CD or Tape buttons.


### Battery Charging

While the phone is connected to the coil cord and installed in the cradle, the phone's battery is automatically charged whenever the ignition is ON.

### DTMF Tones

While in a call you can transmit a DTMF (Dual Tone Multi Frequency) tone, to control remotely equipment such as an answering machine, by keying in the appropriate numbers on the radio keypad. The numbers entered will show on the radio display until the call ends. This feature can be keyed by using either the radio keypad or the phone keypad.

## ADDITIONAL INFORMATION

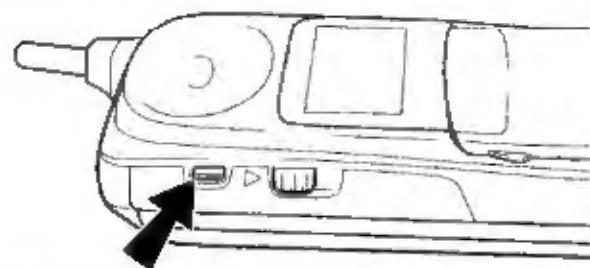

JLX-198

### Changing a Phone Number

When making a call, you can change the phone number shown on the radio display using the C button on the radio.

A momentary press erases any single digit; a long press erases the complete number.

### Front/Rear Phone Fade

Using the radio mode button, front/rear phone fade can be adjusted by using the radio volume controls.

### Safety Timer

If the safety timer is set to a value greater than zero, the phone will remain on for the duration of the timer period when the ignition is turned off. See the 'Telephone User Guide'.

**Note:** If the ignition is off, and a call is received during the safety timer period, no ringing tone will be heard until the ignition is turned on.

### International Dialling Prefix

Press and hold the 0 button on the radio keypad for two seconds to display the dialling prefix + symbol. For further information, see the 'Telephone User Guide'.